

Operating Instructions



Popcorn Machine

Note: Always follow the safety instructions affixed to this machine. This popcorn machine requires a dedicated 20-amp outlet. Please be sure that nothing else is plugged into this same circuit.

1. There are three switches on the popper.
 - The kettle motor and exhaust switch power the machine.
 - The kettle heat switch heats the kettle.
 - The light switch operates the inside lights.
2. Turn the kettle motor and heat switches to the "on" position.
3. Make a test pop using the MEGA-POP pre-mixed popcorn kit.
4. Load pre-measured oil into the kettle. If it is solid, let it warm for a minute or two.
5. Add pre-measured corn. Close the lid and let it pop. The stirring wire at the bottom of the kettle should constantly be turning. USE ONLY ONE PACKET OF KERNELS AT A TIME!
6. Popcorn will start to open the lid and fall to the machine's basin.
7. When corn has finished popping, dump the kettle. (Please remain attentive to popping sounds. If you do not dump the kettle after the corn has finished popping, it will burn)
8. If you are experiencing burnt corn or excessive smoke, turn the kettle heat off for a few minutes. The corn will continue to pop but at a reduced rate.

**For any questions or concerns, be sure to contact us immediately.
Thank you for your business!**

1155 Route 9
Wappingers Falls, NY
(845) 298-0011



1 Precision Road
Danbury, CT
(203) 744-2295