

JLG 260MRT SCISSOR LIFT OPERATING INSTRUCTIONS & SPECIFICATIONS

Quick Start Guide

The ground control station and platform control station emergency stop buttons (RED) must be set to "ON" in order to operate this machine.

- 1. Travelling and steering** – Place the key selector switch on the ground control station to platform operation. On the platform control station, position the lift/drive switch to the drive position
 - **To move unit forward and backward:** Grab the joystick and pull the trigger on the back side. Push forward to move forward and pull backward to drive the unit backward.
 - **To steer the unit:** At the top of the joystick there is a rocker switch. Push the left side of the switch to turn the wheels left and push the right side of the switch to turn the wheels to the right.
- 2. Raising and lowering platform** – On the platform control station, position the lift/drive switch to the lift position
 - **To raise and lower platform** – Grab the joystick and squeeze the trigger on the back side. Pulling the joystick will raise the platform and pushing the joystick will lower the platform.
- 3. When unit is not in use** – Make sure to push the emergency stop button when the machine is not in use. This will preserve the battery and avoid any accidents.
- 4. Getting power to the platform** – If you are using electric tools while in the air, there is a power outlet on the platform. In order to power the outlet, you must grab the plug from the front of the machine and plug it into a power source. This will provide the power to the platform outlet.
- 5. Switching fuel mode** – This unit is equipped with dual fuel capability, letting you use gas or propane to operate.

- **To switch from gas to propane** – Start the engine from the ground control station. Open the hand valve on the propane tank by turning it counterclockwise. While the engine is running, place the LPG/GAS Select switch at the platform control station to the LP GAS position.
- **To switch from propane to gas** – With the engine operating on propane under no load, position the LPG/GAS Select switch at the platform control station to the GAS position.

JLG 260MRT SCISSOR LIFT

OPERATING INSTRUCTIONS & SPECIFICATIONS

Unit Specifications

Ground Clearance	8"
Machine Height	7' 9.5"
Machine Height (Rails Folded)	4' 1.5"
Machine Length	8' 9"
Machine Width	5' 9"
Machine Weight	8160 lbs
Platform Extension Length	4'
Platform Height – Lowered	4' 1.5"
Platform Railing Height	3' 7.5"
Platform Size	65 in x 102 in
Wheel Base	6' 6"
Platform Height - Elevated	26'
Working Height	32' 5"

Gradeability	35%
Platform Capacity	1250lb
Platform Capacity – Extension	300lb