

## **GAS POWERED TRASH PUMP SET UP & OPERATION**

### **Priming Pump**

1. Make sure unit is as close to water as possible, on a firm, flat surface. Remove the fill cap from the unit (Red cap on top of unit) and fill with water. If not filled with water before starting, it will not begin pumping.
2. Attach suction and discharge hoses to the pump and make sure they are securely fitted. Place the suction hose in your desired area that you are trying to remove water.

### **Starting the engine**

1. Move the engine speed lever to the START position
2. Grasp the starter grip and slowly pull it out until you feel the strongest resistance and then return it to its initial position.
3. Pull the starter grip again, hard and fast, pulling it all the way out to start the engine
4. The suction should start when the engine is started; To check this, place one hand over the suction hose to see if you feel it creating a vacuum.