

## MINI TRACK LOADER HOW-TO'S

### **Hydraulic Line Connect/Disconnect**

1. Turn off the engine and remove the key. Release all pressure in the hydraulic system by moving the hydraulic controls in both directions to ensure lines are depressurized.
2. Pulling back on the quick coupler sleeve should release the hydraulic hose from the machine. Sometimes it can still be a little tight so you may have to use some force to pull the sleeve back.
3. To Reconnect new lines, follow the same procedure in reverse. Once the male end of the hydraulic line is resting in the quick coupler, with some force at a straight angle, push the hydraulic line into the coupler. Once you hear it click and see the hydraulic coupler sleeve slide forward over the attached hose, it will be ready for use.

### **Adding/Removing Attachments**

1. To replace the bucket with an attachment, first make sure the unit is stationed on a flat, even surface.
2. If there are any hydraulic lines connected from the attachment to the machine, turn the machine off and disconnect the lines.

3. At the front of the unit where the bucket is, there will be two handles (one on either side) located directly behind where the bucket is attached to the mounting plate. To remove the bucket/attachment, lift both handles up to release the locking pins.
4. Once the handles are both facing upward and the hydraulic lines are disconnected, turn the machine back on.
5. While standing on the platform, tilt the front mounting plate slightly forward to create a gap between the bottom of the mounting plate and the attachment (Push the joystick on the right side, to the right).
6. Slowly drive the machine in reverse and the attachment will disconnect from the machine.
7. To put a new attachment on, follow the same steps in reverse. If hydraulic hoses need to be connected, do it last and make sure you turn the machine off to make it easier.