

KUBOTA BACKHOE HOW-TO'S

Operating the Seat Switch (From In-Seat Position)

1. Travel Adjustment

- The lever under the right corner of the seat is the travel adjustment. Pull lever to slide seat forward and backward.

2. Suspension Adjustment

- The suspension adjustment knob is located directly in the middle, under the seat. Turn the knob to the left or right to decrease or increase the suspension setting.

3. Seat Rotation

- Located under the left side of the seat, this lever releases the lock to let the seat swivel. Unlock the seat lever and rotate clockwise until it locks in place to operate the backhoe controls.

Regeneration Operating Procedure

- The unit has an automatic regeneration procedure. The machine will notify you when a regen is needed. When this happens, make sure the unit is not in tall, dry material. Park the machine and throttle it all the way up and once done, the light will go out and you can return to normal operation.

Helpful Tips

- Run the unit at least $\frac{3}{4}$ throttle while using it to prevent DPF buildup
- Let the unit run for a couple of minutes before operating at full capacity to allow the fluids circulate and let the hydraulics warm up.