

Gas Powered Trash Pump Troubleshooting

Pump not taking water

- **Not enough water in housing** – Add water
- **Engine speed too low** – Increase throttle
- **Pump located too high above water line** – Move pump closer to water

Pump taking water, little or no discharge

- **Engine speed too low** – Increase throttle speed
- **Suction strainer clogged** – Clean Strainer

Suction hose leaking at inlet

- **Fittings/Clamps not sealed properly** – Tighten replace or add clamp
- **Hose diameter too large** – Use smaller hose

Discharge does not stay on coupling

- **Pressure too high** – Check pressure, add addl. Clamp
- **Hose kinked or end blocked** – Check hose